

# Measurement Computing Product Support **DAQami**

The following table lists the hardware supported by DAQami. OEM variants and compatible expansion devices are also supported.

## USB

- |                      |                             |                            |
|----------------------|-----------------------------|----------------------------|
| ▪ miniLAB 1008       | ▪ USB-1808 <sup>1,2</sup>   | ▪ USB-3110                 |
| ▪ SC-1608-USB        | ▪ USB-1808X <sup>1,2</sup>  | ▪ USB-3112                 |
| ▪ SC-1608X-2AO-USB   | ▪ USB-2001-TC               | ▪ USB-3114                 |
| ▪ SC-1608X-USB       | ▪ USB-201                   | ▪ USB-5201 <sup>4</sup>    |
| ▪ SwitchAndSense-8/8 | ▪ USB-202                   | ▪ USB-5203 <sup>4</sup>    |
| ▪ TC-32              | ▪ USB-2020                  | ▪ USB-7202                 |
| ▪ USB-1024HLS        | ▪ USB-204                   | ▪ USB-7204                 |
| ▪ USB-1024LS         | ▪ USB-205                   | ▪ USB-CTR04 <sup>1</sup>   |
| ▪ USB-1208FS         | ▪ USB-231                   | ▪ USB-CTR08 <sup>1</sup>   |
| ▪ USB-1208FS-Plus    | ▪ USB-234                   | ▪ USB-DIO24/37             |
| ▪ USB-1208HS         | ▪ USB-2408 <sup>3</sup>     | ▪ USB-DIO24H/37            |
| ▪ USB-1208HS-2AO     | ▪ USB-2408-2AO <sup>3</sup> | ▪ USB-DIO32HS              |
| ▪ USB-1208HS-4AO     | ▪ USB-2416 <sup>3</sup>     | ▪ USB-DIO96H               |
| ▪ USB-1208LS         | ▪ USB-2416-4AO <sup>3</sup> | ▪ USB-DIO96H/50            |
| ▪ USB-1408FS         | ▪ USB-2623                  | ▪ USB-ERB08                |
| ▪ USB-1408FS-Plus    | ▪ USB-2627                  | ▪ USB-ERB24                |
| ▪ USB-1608FS         | ▪ USB-2633                  | ▪ USB-PDISO8               |
| ▪ USB-1608FS-Plus    | ▪ USB-2637                  | ▪ USB-PDISO8/40            |
| ▪ USB-1608G          | ▪ USB-3101FS                | ▪ USB-SSR08                |
| ▪ USB-1608GX         | ▪ USB-3101                  | ▪ USB-SSR24                |
| ▪ USB-1608GX-2AO     | ▪ USB-3102                  | ▪ USB-TC                   |
| ▪ USB-1608HS         | ▪ USB-3103                  | ▪ USB-TC-AI                |
| ▪ USB-1608HS-2AO     | ▪ USB-3104                  | ▪ USB-TEMP <sup>3</sup>    |
| ▪ USB-1616FS         | ▪ USB-3105                  | ▪ USB-TEMP-AI <sup>3</sup> |
| ▪ USB-1616FS-Plus    | ▪ USB-3106                  |                            |

## Ethernet<sup>3</sup>

- |           |                    |         |
|-----------|--------------------|---------|
| ▪ E-1608  | ▪ E-TC             | ▪ TC-32 |
| ▪ E-DIO24 | ▪ SC-1608-2AO-ENET |         |

<sup>1</sup> Includes support for synchronous I/O (composite) operations.

<sup>2</sup> DAQami does not support encoders at this time.

<sup>3</sup> Some device features must be configured using InstaCal™.

▪ For multi-sensor temperature devices, this includes configuring RTD, thermistor, and semiconductor measurements.

▪ For Ethernet devices, this includes the connection code stored on the device, alarm options, and other network settings.

<sup>4</sup> DAQami only supports USB-5200 Series devices that are connected by USB. Data logging mode is not supported.