
Logicbus

FBs-PEP

Parameter Entry Panel

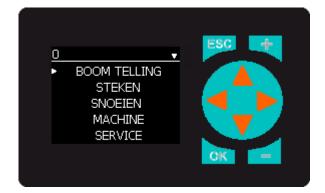

Introduction

FBs-PEP is originally designed as a cost effective and compact HMI device, which is mainly used for simple parameter entry and monitoring applications. While install, The FBs-PEP can be mounted on the control panel and be connected to Fatek PLC with RS232 interface. Besides the main feature of data entry function, it also provides the alarm function. The operation design of PEP is based on the multi-level menu driven methodology. With this method, the operation of parameter entry can be very intuitive if the whole operations were carefully categorized into different menu levels. The PEP utilizes the dot matrix OLED display

which makes it highly visible and can be shown patterns and multi-lingual characters. The programming of user menu for PEP is by using

the accompany utility – PEP Designer. With this utility, the user can design and simulate the menu design before actually download it to the PEP.

Features

- Hierarchical menu driven entry design
- Alarm function
- Customized start up screen
- Two-Level password protection
- Configurable screen saver
- Multi-lingual character display
- Menu with hint
- On-line/Off-line design simulation

Specifications


Display Resolution – 128 x 96 **Display Size**-1.3 inch **Display Device** –white light OLED Max. Levels of Menu – 6 Max. Menus per Level - 10 Max. Menus Per Screen – 5 Max. Start up Screens - 16 Max. Alarm Messages - 64 Number of Operation Keys – 8 Max. Size of Menu Program - 128K Bytes Menu Types - Menu, Value, List, Action Action Types – Force On, Force Off, Toggle, Force Value, Add Value, Push On, Push Off. Interface – RS232 Power Consumption –5V, 150mA **Operating Temperature** $-0 \sim 60$ °C Storage Temperature -20 ~ 80 °C **Dimension** – 76x48x24 (mm, WxHxD)



support@logicbus.com sales@logicbus.com



San Diego, Ca. USA. +1 (619)-616-7350 Mexico City. +52 (55)-8995-3820 Suadalajara, Mexico. +52 (33)-3854-5975

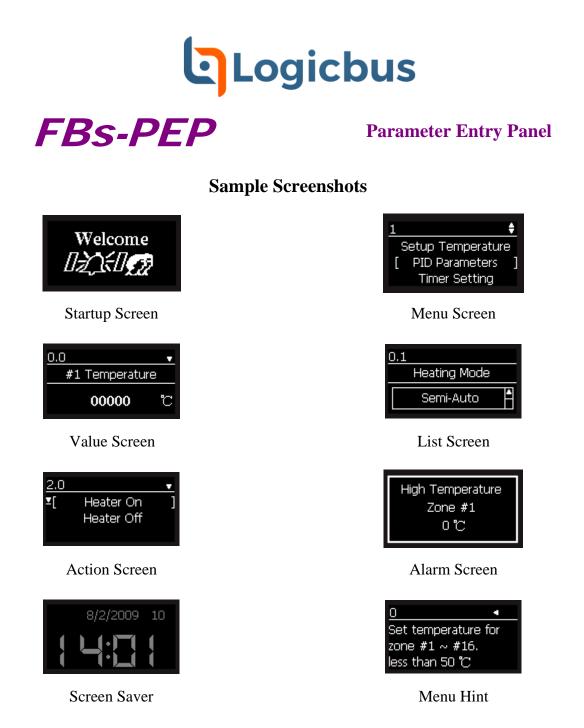

Installation note for PEP module:

- The menu design for PEP module is conducted on the PC with PEP Designer software. While transfer the menu design from the PC to PEP module, the PLC should at least equip 2 communication ports. One is RS232 port for PEP module connection, the other is communication port for PC connection.
- 2. For normal operation usage, there should equip one RS232 communication port for PEP connection.

Remarks:

In view of characteristic of LED monitor please set screen saver(dark screen) to avoid lighting on for long time then shrink product life and lose backlight.





support@logicbus.com sales@logicbus.com



San Diego, Ca. USA. +1 (619)-616-7350 Mexico City. 52 (55)-8995-3820 Suadalajara, Mexico. 52 (33)-3854-5975